



6H 5117.a

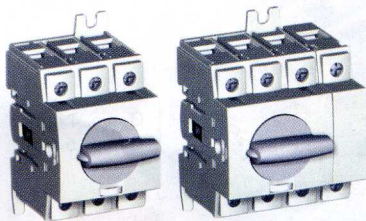


HAB 302/306 HAB 402/406  
HAC 306/310 HAC 406/410

20A - 100A


|             | Ref. Switch<br>Réf. Inter. | Rating<br>Calibre | AC     | Ref. Terminal shrouds<br>Réf. Capot cache-bornes |
|-------------|----------------------------|-------------------|--------|--------------------------------------------------|
| ①<br>3 Nm   | HAB 302                    | 3 x 20 A          | AC-23A | HZC 211                                          |
|             | HAB 402                    | 4 x 20 A          |        | HZC 212                                          |
|             | HAB 303                    | 3 x 32 A          |        | HZC 211                                          |
|             | HAB 403                    | 4 x 32 A          |        | HZC 212                                          |
|             | HAB 304                    | 3 x 40 A          | AC-22A | HZC 211                                          |
|             | HAB 404                    | 4 x 40 A          |        | HZC 212                                          |
|             | HAB 306                    | 3 x 63 A          |        | HZC 211                                          |
|             | HAB 406                    | 4 x 63 A          |        | HZC 212                                          |
| ②<br>3,5 Nm | HAC 306                    | 3 x 63 A          | AC-23A | HZC 213                                          |
|             | HAC 406                    | 4 x 63 A          |        | HZC 214                                          |
|             | HAC 308                    | 3 x 80 A          |        | HZC 213                                          |
|             | HAC 408                    | 4 x 80 A          |        | HZC 214                                          |
|             | HAC 310                    | 3 x 100 A         | AC-22A | HZC 213                                          |
|             | HAC 410                    | 4 x 100 A         |        | HZC 214                                          |





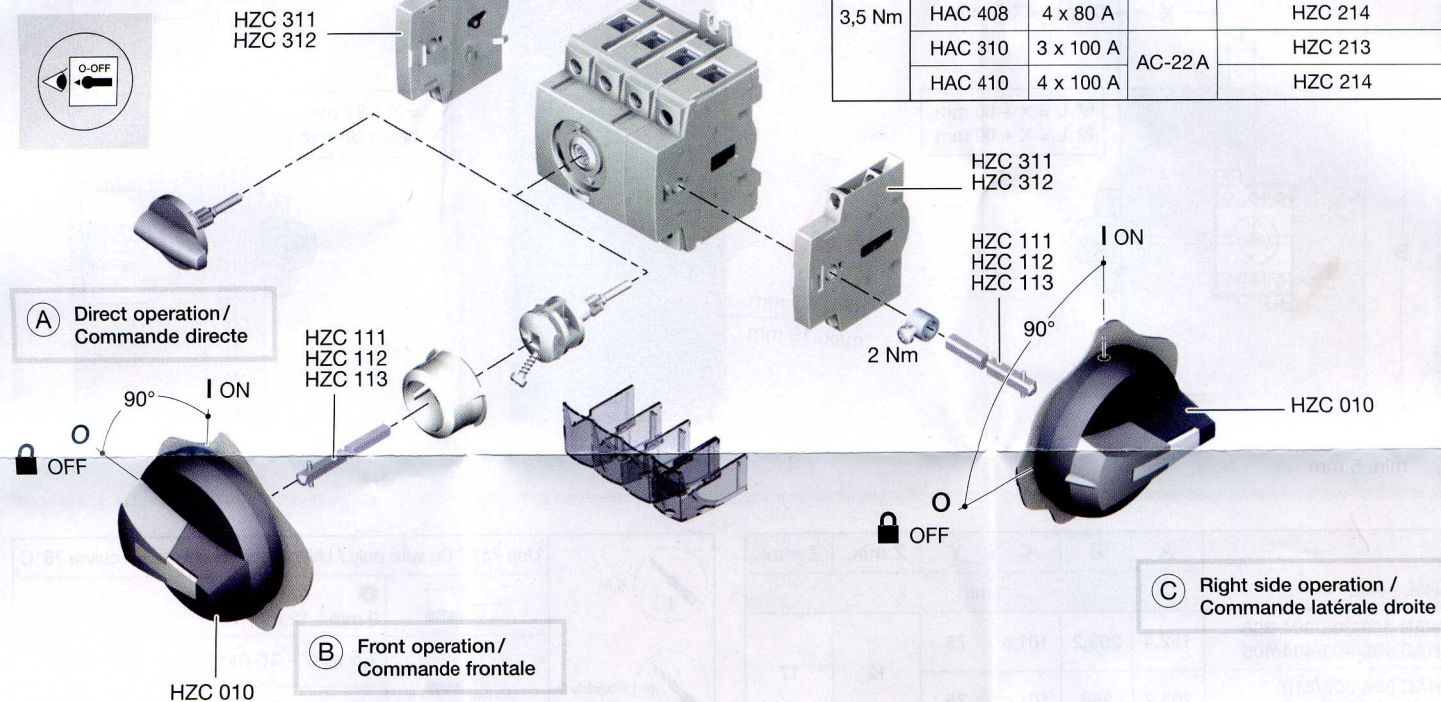


(A) Direct operation/  
Commande directe

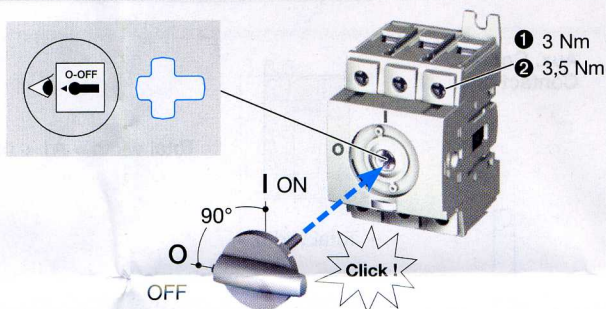

(B) Front operation/  
Commande frontale

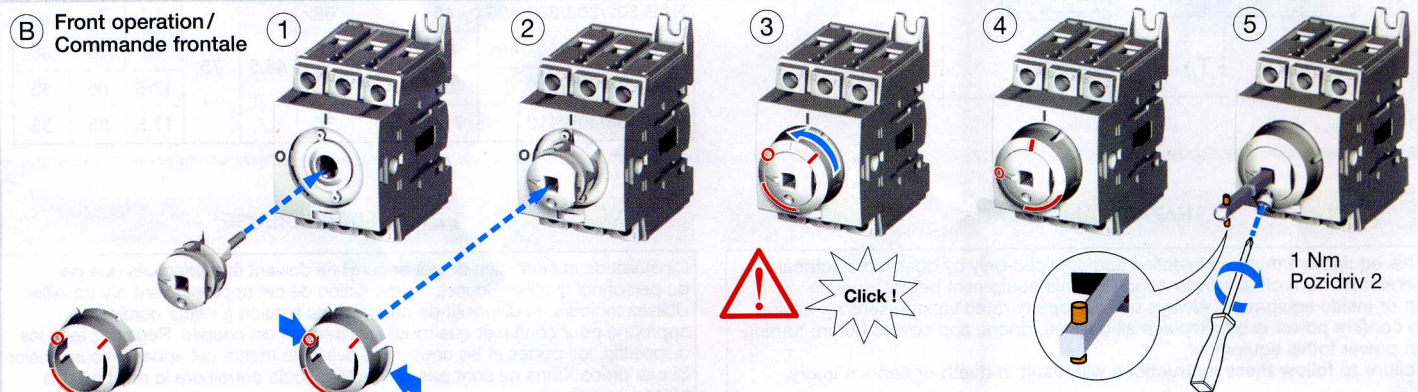

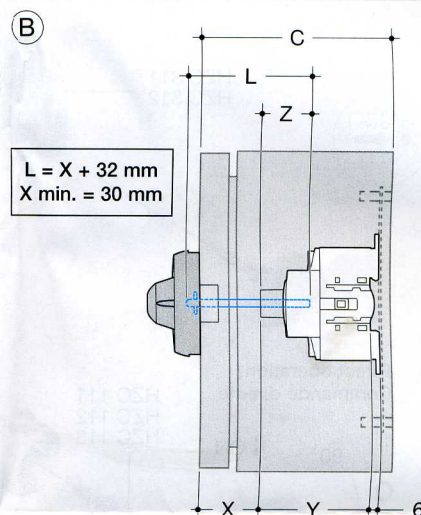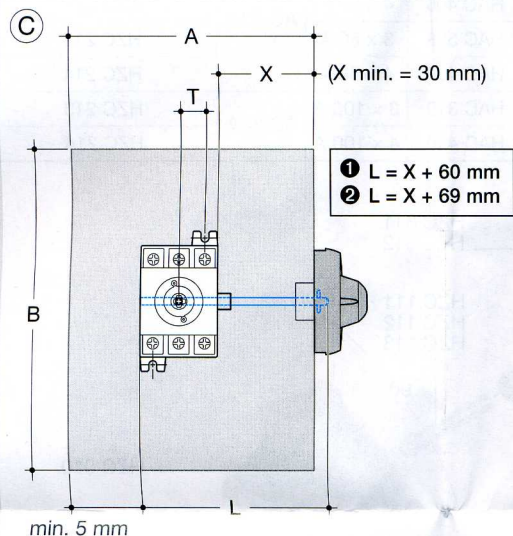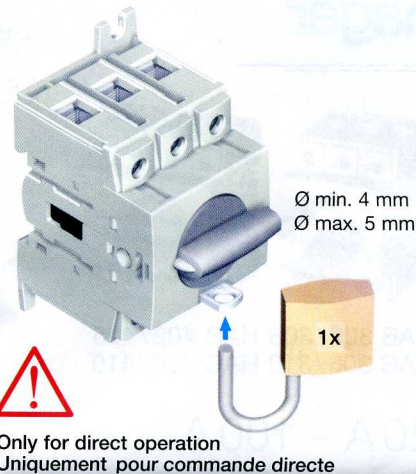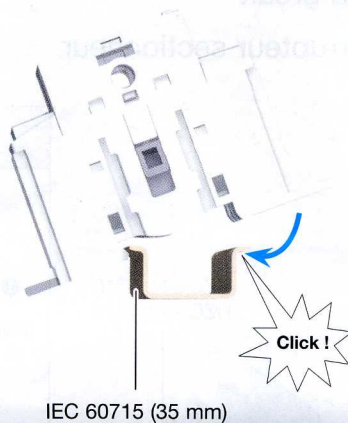
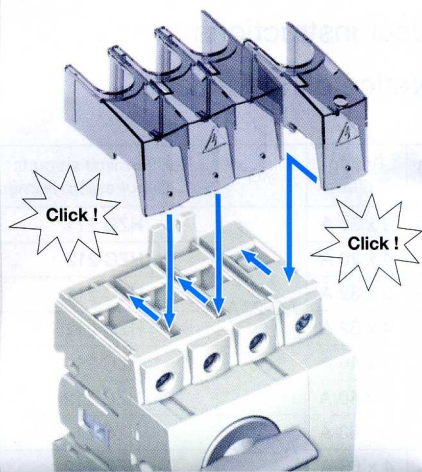


| Ref. / Réf.                                | A     | B     | C     | Y  | Z min. | Z max. |
|--------------------------------------------|-------|-------|-------|----|--------|--------|
| HAB 302/303/304/306<br>HAB 402/403/404/406 | 152,4 | 203,2 | 101,6 | 75 | 12     | 17     |
| HAC 306/308/310<br>HAC 406/408/410         | 203,2 | 254   | 101,6 | 75 |        |        |

| Use 75°C Cu wire only / Utiliser uniquement du fil cuivre 75°C |                  |
|----------------------------------------------------------------|------------------|
| 1                                                              | 2                |
| 9 mm - 12 mm                                                   | 1,5 mm² - 16 mm² |
| 1,5 mm² - 16 mm²                                               | 2,5 mm² - 35 mm² |
| 3 Nm                                                           | 3,5 Nm           |

Switch/  
Interrupteur

Aux. Contact/  
Contact aux.

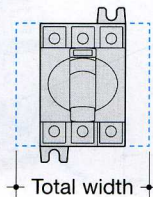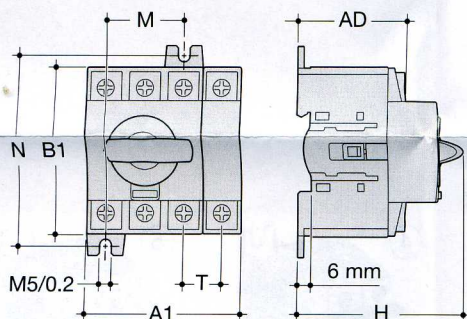

| Ref. / Réf.         | A1   | A2  | B1 | AD   | H  | T    | N  | M  |
|---------------------|------|-----|----|------|----|------|----|----|
| HAB 302/303/304/306 | 45   |     | 68 |      |    | 15   | 75 | 30 |
| HAB 402/403/404/406 | 60   | 8,8 | 68 | 48,5 | 75 | 15   | 75 | 30 |
| HAC 306/308/310     | 54   |     | 76 |      |    | 17,5 | 85 | 35 |
| HAC 406/408/410     | 71,5 |     | 76 |      |    | 17,5 | 85 | 35 |



HAZARDOUS VOLTAGE

This equipment must be installed and serviced only by qualified electrical personnel. Turn off all power supplying this equipment before working on or inside equipment. Always use a properly rated voltage sensing device to confirm power is off. Replace all devices, doors, and covers before turning on power to this equipment.  
Failure to follow these instructions will result in death or serious injury.



TENSION DANGEREUSE

L'installation et l'entretien de cet appareil ne doivent être effectués que par du personnel qualifié. Coupez l'alimentation de cet appareil avant d'y travailler. Utilisez toujours un dispositif de détection de tension à valeur nominale approprié pour confirmer que toute alimentation est coupée. Remplacez tous les dispositifs, les portes et les couvercles avant de mettre cet appareil sous tension. Si ces précautions ne sont pas respectées, cela entraînera la mort ou des blessures graves.