



(GB) Changeover switch      User instructions  
 (FR) Commutateur modulaire      Notice d'instructions

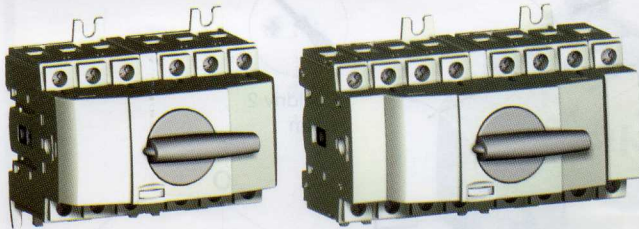

HIM302 / 304 / 306 / 308  
 HIM402 / 404 / 406 / 408

20 A - 80 A

	Ref. Switch Réf. Commutateur	Rating Calibre	AC	Ref. Terminal shrouds Réf. Capot cache-bornes
①	HIM302	3 x 20 A	AC-23 A	HZC211
	HIM402	4 x 20 A		HZC212
	HIM304	3 x 40 A		HZC211
	HIM404	4 x 40 A		HZC212
②	HIM306	3 x 63 A	AC-23 A	HZC213
	HIM406	4 x 63 A		HZC214
	HIM308	3 x 80 A		HZC213
	HIM408	4 x 80 A		HZC214

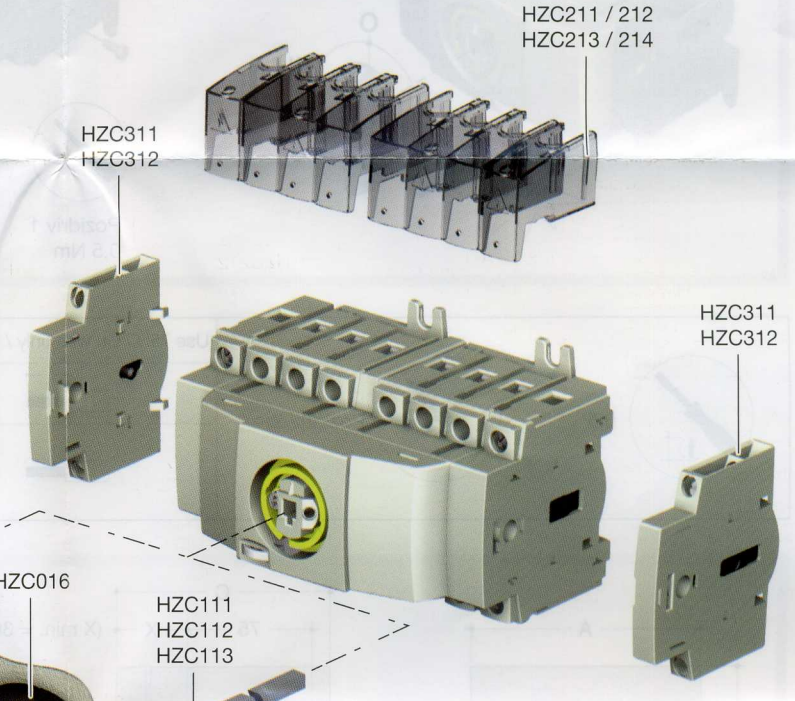

(A) Direct operation /  
Commande directe

(B) Front operation /  
Commande frontale

## Configuration

①

standart

②

Pozidriv 1  
0,5 Nm

max. Ø 5 mm  
min. Ø 4 mm

Only for direct operation  
Uniquement pour commande directe

**HAZARDOUS VOLTAGE**

This equipment must be installed and serviced only by qualified electrical personnel. Turn off all power supplying this equipment before working on or inside equipment. Always use a properly rated voltage sensing device to confirm power is off. Replace all devices, doors, and covers before turning on power to this equipment. Failure to follow these instructions will result in death or serious injury.

**TENSION DANGEREUSE**

L'installation et l'entretien de cet appareil ne doivent être effectués que par du personnel qualifié. Coupez l'alimentation de cet appareil avant d'y travailler. Utilisez toujours un dispositif de détection de tension à valeur nominale approprié pour confirmer que toute alimentation est coupée. Remplacez tous les dispositifs, les portes et les couvercles avant de mettre cet appareil sous tension. Si ces précautions ne sont pas respectées, cela entraînera la mort ou des blessures graves.

Edition 10/09 IS 535619-B / RECTO-VERSO / S blanc offset quadri 80g/m²

